

## ES Instrucciones digitales

Esta locomotora lleva incorporado el nuevo receptor LokPilot V.4.0 de nueva generación. Estos receptores pueden ser utilizados tanto por los sistemas digitales tipo Lenz como por los sistemas digitales de Märklin® (DCC, Motorola, Selectrix, ...)


### CARACTERÍSTICAS:

- Configuración de fábrica para la dirección (CV1) de la locomotora 03.
- Frecuencia 40 khz para un control del motor más suave, con una 5<sup>a</sup> generación de control.
- Mejora del mapa de funciones.
- El V.4.0 puede ser utilizado en funciones DCC, Motorola y Selectrix, DC y AC.
- 14, 28 y 128 pasos de velocidad para sistemas DCC.
- 2 salidas direccionales para las luces, 180mA de consumo.
- Tiene una mejor salida para funciones, de hasta 250 mA por cada una de ellas, con un total de 500 mA, conjuntamente.
- Modo de frenado ABC: parada del modelo ante una señal.

### CAMBIOS DE LOS PARÁMETROS DEL DECODER:

El LokPilot V.4.0 decoder digital conoce muchos parámetros. Al final de estas instrucciones pueden encontrar una lista con las más importantes. Todos los valores están especificados en CV / variables de configuración. Estos pueden ser cambiados específicamente, dependiendo del comando usado.

Cuando programe usando el equipo Lenz, Uhlenbrock o de Arnold, siga las instrucciones de programación del fabricante. Si aparece el mensaje de error "err02" durante la programación con el equipo Lenz o de Arnold, debe ser insertado entre uno de los dos cables suministrados y la pista programada una resistencia de 47 Ohm (0.5 Vatios o más).

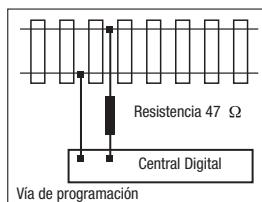

### Sistemas DCC Sistemas (Lenz, Intellibox, etc.)

Los CVs son mucho más fáciles de cambiar si usted tiene un sistema digital compatible DCC o un Intellibox. Por favor lea el capítulo correspondiente en el manual de su sistema (programación decoders DCC). El LokPilot V.4.0 Decoder acepta todos los modos de programación NMRA.

### OPERACIONES ANALÓGICAS

Cuando se utiliza con transformadores de mando convencionales, el movimiento de la locomotora es similar al de una locomotora sin decodificador. La locomotora sólo iniciará el movimiento con una tensión de control de accionamiento de entre 5,5 y 6 voltios, ya que el propio decodificador necesita una tensión mínima determinada para funcionar. Las funciones de sonido no están activadas en el funcionamiento analógico.

Debe tener en cuenta las advertencias siguientes:

Antes de realizar cualquier manipulación, desconecte siempre el decodificador de la fuente de alimentación.

La función de reinicio es muy práctica, ya que le permite recuperar los valores originales de fábrica en cualquier momento, tanto en funcionamiento DCC como Motorola. Para que esto sea posible, debe escribir un 8 en CV 8 o un 08 en el Registro 08.

#### Funciones

F0	Luz frontal	F1	Foco principal
F2	Luces rojas	F3	Luz interior
F4	Atenuador	F5	Aceleración / Freno

CV	NOMBRE	DESCRIPCIÓN	RANGO	VALOR
1	Dirección Locomotora	Dirección de la locomotora	1-255	3
2	Voltage inicial	Grupo de velocidades mínimas de la locomotora	1-255	3
3	Aceleración	Este valor multiplicado por 0.869 es el tiempo desde la posición stop hasta velocidad máxima	1-255	80
4	Deceleración	Este valor multiplicado por 0.869 es el tiempo máximo hasta que se detiene	1-255	80
5	Velocidad Máxima	Velocidad máxima de la locomotora		255
6	Velocidad Media	Velocidad media de la locomotora		88
8	ID de producto	Número versión de fabricación (I+D) de ESU. Establecer CV8 a valor 8 para el reseteo automático		151
17 - 18	Extensión locomotora	Alargar dirección de la locomotora	128-9999	192 0
27	Modo frenada	Modos de frenado activados		
		Bit	Función	Valor
		0	Frenada ABC, voltaje más alto en el lado derecho	1
		1	Frenada ABC, voltaje más alto en el lado izquierdo	2
		2	ZIMO® HLU frenos activos	4
		3	Frenada en DC si la polaridad es contraria a la dirección de la marcha	8
		4	Frenada en DC si la polaridad es la misma a la dirección de la marcha	16
28	Configuración RailCom®	Configuración para RailCom®		
		Bit	Función	Valor
		0	Emisión de Canal 1 desactivada	0
			Emisión de Canal 2 activada	1
		1	Transmisión de datos no permitida en Canal 2	0
			Transmisión de datos permitida en Canal 2	2
		7	Solicitud automática de apagado	0
			Solicitud automática de encendido	128
29	Configuración registro	Las normas DCC contienen el más completo número de configuración de variables (cv). Esta información es importante únicamente para DCC		
		Bit	Función	Valor
		0	Dirección normal de trayecto	0
			Dirección contraria al trayecto	1
		1	14 niveles de velocidad (solo para DCC)	0
			28/128 niveles de velocidad (solo DCC)	2
		2	Operación analógica interrumpida	0
			Operación analógica permitida	4
		3	Inactivo RailCom®	0
			Activo RailCom®	8
		4	Curva de velocidad mediante CV2,5,6	0
			Curva de velocidad CV 67 - 96V	16
		5	Dirección corta CV 1en DCC	0
			Dirección larga CV 17+18 en DCC	32

Locomotive are fitted with ESU's latest generation LokPilot® decoder version V.4.0. These new decoders can be used in Lenz and Märklin® digital systems (DCC, Motorola, Selectrix, ...)


**YOUR BENEFITS:**

- Factory preset address for the locomotive is 03.
- 40 kHz tact frequency for smooth and silent motor control, 5th generation of load control.
- The V.4.0 decoder supports DCC, Motorola, DC, AC and Marklin® digital systems.
- 14, 28 or 128 selectable speed steps for DCC systems.
- Improved function mapping: All outputs can be assigned to any function button.
- Function outputs have a throughput of up to 250 mA each, all outputs together 500 mA.
- ABC braking mode: Stop in front of the signal..

**DECODER PARAMETERS ADJUSTING:**

The LokPilot V.4.0 decoder controls several parameters. You can find a list of the most important ones at the end of this instructions. Each parameter (CV) can be configured independently using its respective command.

When programming using Lenz, Uhlenbrock or Arnold equipment, please refer to their programing instructions. If the error message "err02" is displayed during programming with Lenz or Arnold equipment, a 47 Ohmresistor (0.5 Watt or higher) must be inserted between one of the two supply cables and the programming track.

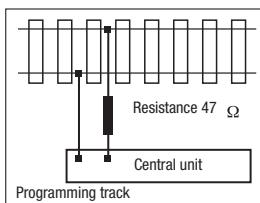
**DCC Systems (Lenz, Intellibox, etc.)**

It is much easier to modify the parameters if you have a DCC compatible digital system or an Intellibox. Please, read the corresponding chapter in your system manual (DCC decoders programming). The V.4.0 Loksound decoder support any NMRA programming system.

**ANALOG OPERATION**

When using conventional transformer, the locomotive movement will be similar to that of a locomotive without a decoder. The locomotive will only start its running when receiving a minimum voltage between 5.5 and 6 volts, as the decoder will not work with a lower tension.

Please note the following warnings:

Always disconnect the decoder from the power supply before doing any work on it. The reset function is very convenient, as you can set the original factory values again at any time. You can use this function with DCC and Motorola systems. To use this function, type "8" in CV 8 or "08" in register "08".

**Functions**

F0	Main light	F1	Upper light
F2	Red lights	F3	Interior light
F4	Dimmer	F5	Acceleration/deceleration on/off

CV	NAME	DESCRIPTION	RANGER	VALUE
1	Loco address	Locomotive address	1-255	3
2	Start voltage	Sets the minimum speed of the engine	1-255	3
3	Acceleration	This value multiplied by 0.869 is the time from stop to maximum speed	1-255	80
4	Deceleration	This value multiplied by 0.869 is the time from maximum speed to stop	1-255	80
5	Maximum speed	Maximum speed of engine		255
6	Medium speed	Average engine speed		88
8	Product ID	ESU version number		151
17 - 18	Extended locomotive address	To lengthen locomotive address	128-9999	192 0
27	Brake mode	Allowed brake modes		24
		Bit      Function		
		0	ABC braking, voltage higher on the right hand side	1
		1	ABC braking, voltage higher on the left hand side	2
		2	ZIMO® HLU brakes active	4
		3	Brake on DC, if polarity against driving direction	8
		4	Brake on DC, wenn polarität gleich wie Fahrtrichtung	16
28	RailCom® Configuration	Settings for RailCom®		131
		Bit      Function		
		0	Channel 1 Address broadcast disabled	0
		0	Channel 1 Address broadcast enabled	1
		1	No data transmission allowed on Channel 2	0
		1	Data transmission allowed on Channel 2	2
		7	Automatic loco recognition disabled	0
		7	Automatic loco recognition enabled	128
29	Configuration register	The most complex CV within the DCC standards. This register contains important information, which is only relevant in DCC mode		14
		Bit      Function		
		0	Normal direction of travel	0
		0	Forward becomes reverse	1
		1	14 speed steps (only in DCC mode)	0
		1	28 or 128 speed steps (only in DCC mode)	2
		2	Analogue mode off	0
		2	Analogue mode permitted	4
		3	Disable RailCom®	0
		3	Enable RailCom®	8
		4	Speed curve through CV 2, 5, 6	0
		4	Speed curve through CV 67 - 96V	16
		5	Short addresses (CV 1) in DCC-mode	0
		5	Long addresses (CV 17+18) in DCC-mode	32

Manufactured by:  
Hornby Hobbies Ltd  
Westwood, Margate,  
Kent, CT9 4JX, UK

EU Authorised Representative:  
Hornby Italia SRL  
Viale dei Caduti, 52/A6,  
Castel Mella (BS), Italy, 25030

+34 938004786  
customerservices.es@hornby.com  
technicalservices.es@hornby.com

+33 170807487  
customerservices.fr@hornby.com  
technicalservices.fr@hornby.com

+49 8921094551  
customerservices.de@hornby.com  
technicalservices.de@hornby.com

+44 (0)1843 233525  
customerservices.uk@hornby.com  
technicalservices.uk@hornby.com

CE 12V == 14+

Service Sheet ELBD-139m

Issued November 2020 - Subject to technical modifications